

The former warning flasher switch with transmitter section is replaced by the separate warning flasher switch and warning flasher transmitter of model 126. The warning flasher transmitter is located under cover between ashtray and shift lever.

